



1. Select a group and channel needed to program.

Select a group by pressing the "#" key followed by a 2-digit group number and press the "ENT" key.

2. Program Access

- o Insert programming plug into radio side connector.
- o Press and hold the master switch on plug.
- o While pressing the master switch, press and hold the "FNC" key for about 3 secs.
- o LCD should display "-- --ID".
- o Enter the SIX-DIGIT password to enter program mode. (Note: NIFC radio password is "000000")
- o If the correct password was entered, the LCD displays "RG CH 00".

3. Programming a Channel (ANALOG Only)

Once in the Program Mode, press a 2-digit channel number to program with the keypad.

- "RG CH 01".....Channel 01 Settings is currently selected.
- "RG CH 01N".....Press # to toggle between Narrow/Wide Band and press the "FNC" key.
- "RG RX 170.47500".....Press "CLR" and enter new RX Frequency and press the "ENT" key.
- "RG RX MODE-A".....Change RX Mode with "PRI" key to "A" for Analog and press the "ENT" key.
- "RG RX CG 000.0".....Press "CLR" and enter new RX Code Guard and press the "ENT" key.
- "RG RX IDCG NAC0659".....RX NAC Code, DIGITAL ONLY, press the "ENT" key to skip to next field.
- "RG RX ID SQL-NRM".....Change "SQL" with "PRI" key to "NRM" and press the "ENT" key.
- "RG TX 170.47500".....Press "CLR" and enter new TX Frequency and press the "ENT" key.
- "RG TX MODE-A".....Change TX Mode with "PRI" key to "A" for Analog and press the "ENT" key.
- "RG TX CG 103.5".....Press "CLR" and enter new TX Code Guard and press the "ENT" key.
- "RG TX ID CG NAC0659".....TX NAC Code, DIGITAL ONLY, press the "ENT" key to skip to next field.
- "RG ID TG00001".....Talk Group ID, DIGITAL ONLY, press the "ENT" key to skip to next field.
- "RG CHAN 1".....Channel Label, press "ENT" to bring up the first programming field (RG CH 01N).

4. Channel Programming is complete. At this point user may select another channel to program or exit the program mode by cycling power to the radio.

January, 2007



1. Select a group and channel needed to program.

Select a group by pressing the "#" key followed by a 2-digit group number and press the "ENT" key.

2. Program Access

- o Insert programming plug into radio side connector.
- o Press and hold the master switch on plug.
- o While pressing the master switch, press and hold the "FNC" key for about 3 secs.
- o LCD should display "-- --ID".
- o Enter the SIX-DIGIT password to enter program mode. (Note: NIFC radio password is "000000")
- o If the correct password was entered, the LCD displays "RG CH 00".

3. Programming a Channel (ANALOG Only)

Once in the Program Mode, press a 2-digit channel number to program with the keypad.

- "RG CH 01".....Channel 01 Settings is currently selected.
- "RG CH 01N".....Press # to toggle between Narrow/Wide Band and press the "FNC" key.
- "RG RX 170.47500".....Press "CLR" and enter new RX Frequency and press the "ENT" key.
- "RG RX MODE-A".....Change RX Mode with "PRI" key to "A" for Analog and press the "ENT" key.
- "RG RX CG 000.0".....Press "CLR" and enter new RX Code Guard and press the "ENT" key.
- "RG RX IDCG NAC0659".....RX NAC Code, DIGITAL ONLY, press the "ENT" key to skip to next field.
- "RG RX ID SQL-NRM".....Change "SQL" with "PRI" key to "NRM" and press the "ENT" key.
- "RG TX 170.47500".....Press "CLR" and enter new TX Frequency and press the "ENT" key.
- "RG TX MODE-A".....Change TX Mode with "PRI" key to "A" for Analog and press the "ENT" key.
- "RG TX CG 103.5".....Press "CLR" and enter new TX Code Guard and press the "ENT" key.
- "RG TX ID CG NAC0659".....TX NAC Code, DIGITAL ONLY, press the "ENT" key to skip to next field.
- "RG ID TG00001".....Talk Group ID, DIGITAL ONLY, press the "ENT" key to skip to next field.
- "RG CHAN 1".....Channel Label, press "ENT" to bring up the first programming field (RG CH 01N).

4. Channel Programming is complete. At this point user may select another channel to program or exit the program mode by cycling power to the radio.

January, 2007

DPH SETTINGS & OPTIONS

ADD Channel to Scan List

Select CH with CH knob and press the "ENT" key. "SCN" will appear in upper display.

DELETE Channel from Scan List

Select CH with CH knob and press the "CLR" key. "SCN" will be removed from the upper display.

Note: Scan must be disabled to add/delete CH's from scan list.

ADD PRI Scan Channel

Select CH, Press "PRI" key, PRI will appear in display.

Priority Mode B, C or D must be enabled to change PRI Channel via the keypad.

Note: See DPH Help Files for more information.

Changing Groups

Press "#" key, enter desired group with keypad.

HI/LOW Power Selection

Select LO Power by toggling the LO/Hi Switch to the up position. (Toward the back of the radio)

Select HI Power by toggling the LO/Hi Switch to the down position. (Toward the front of the radio)

TX User Selectable Tones

To Enable Tone, press number on keypad so select.

To Disable Tone, press the number "0" on keypad.

Disable/Enable Keypad

To Disable, press and hold "FNC" key.

To Enable, press and hold "FNC" key.

DPH CH 00 Program Guide

- "P000000".....Group Password Assignment
- "0000000".....Group DTMF ID
- "120 SEC".....Transmit Timeout Timer
- "2.0SEC".....Scan Delay Time
- "PR1 OFF".....Priority 1 Channel Assignment
- "PR2 OFF".....Priority 2 Channel Assignment
- Group 1: (NIFC Default is 1-12345)**
- Battery Saver Disabled.....1-12345
- Group Scan.....Disabled.....1-12345
- TX on PRI 1.....1-12345
- Priority Key Lockout.....1-12345
- Scan List Lockout.....1-12345
- Group 2: (NIFC Default is 2-12345)**
- User Code Guard Enabled.....2-12345
- Busy Channel Indicator Enabled.....2-12345
- Busy Channel Lockout Enabled.....2-12345
- Busy Channel Lockout/Override.....2-12345
- ANI Enabled.....2-12345
- Manual DTMF Encoder.....2-12345
- Manual DTMF/ANI Encoder.....2-12345
- Group 3: (NIFC Default is 3-12345)**
- Reserved.....3-12345
- Reserved.....3-12345
- LCD Backlight ON Display Change.....3-12345
- LCD Backlight ON Key Press.....3-12345
- Alphanumeric Mode Enabled.....3-12345
- "LITE OFF".....Back Light Duration
- "GROUP XX".....Group Label

Bold= Flashing

DPH SETTINGS & OPTIONS

ADD Channel to Scan List

Select CH with CH knob and press the "ENT" key. "SCN" will appear in upper display.

DELETE Channel from Scan List

Select CH with CH knob and press the "CLR" key. "SCN" will be removed from the upper display.

Note: Scan must be disabled to add/delete CH's from scan list.

ADD PRI Scan Channel

Select CH, Press "PRI" key, PRI will appear in display.

Priority Mode B, C or D must be enabled to change PRI Channel via the keypad.

Note: See DPH Help Files for more information.

Changing Groups

Press "#" key, enter desired group with keypad.

HI/LOW Power Selection

Select LO Power by toggling the LO/Hi Switch to the up position. (Toward the back of the radio)

Select HI Power by toggling the LO/Hi Switch to the down position. (Toward the front of the radio)

TX User Selectable Tones

To Enable Tone, press number on keypad so select.

To Disable Tone, press the number "0" on keypad.

Disable/Enable Keypad

To Disable, press and hold "FNC" key.

To Enable, press and hold "FNC" key.

DPH CH 00 Program Guide

- "P000000".....Group Password Assignment
- "0000000".....Group DTMF ID
- "120 SEC".....Transmit Timeout Timer
- "2.0SEC".....Scan Delay Time
- "PR1 OFF".....Priority 1 Channel Assignment
- "PR2 OFF".....Priority 2 Channel Assignment
- Group 1: (NIFC Default is 1-12345)**
- Battery Saver Disabled.....1-12345
- Group Scan.....Disabled.....1-12345
- TX on PRI 1.....1-12345
- Priority Key Lockout.....1-12345
- Scan List Lockout.....1-12345
- Group 2: (NIFC Default is 2-12345)**
- User Code Guard Enabled.....2-12345
- Busy Channel Indicator Enabled.....2-12345
- Busy Channel Lockout Enabled.....2-12345
- Busy Channel Lockout/Override.....2-12345
- ANI Enabled.....2-12345
- Manual DTMF Encoder.....2-12345
- Manual DTMF/ANI Encoder.....2-12345
- Group 3: (NIFC Default is 3-12345)**
- Reserved.....3-12345
- Reserved.....3-12345
- LCD Backlight ON Display Change.....3-12345
- LCD Backlight ON Key Press.....3-12345
- Alphanumeric Mode Enabled.....3-12345
- "LITE OFF".....Back Light Duration
- "GROUP XX".....Group Label

Bold= Flashing